

# Audio

[under construction...]

---

Powering on the system:

1. Mixer
  2. Computer
  3. Speakers (via Siemens panel)
- 

Audio output (from computer):

- Audio output should be set to Dante in Audio software
  - NOTE: It's best to keep the system output set to "Internal Speakers" to avoid loud/annoying beeps
  - Sample rate should be set to 48 kHz
- 

[Audio Networking](#)

From:  
<https://wiki.zhdk.ch/IASpace/> - **immersive art space**

Permanent link:  
<https://wiki.zhdk.ch/IASpace/doku.php?id=audio&rev=1626446429>

Last update: **2021/07/16 16:40**

