

# Audio

[under construction...]

---

Powering on the system:

1. Mixer
  2. Computer
  3. Speakers (via Siemens panel)
- 

Audio output (from computer):

- Audio output should be set to Dante in Audio software
  - NOTE: It's best to keep the system output set to "Internal Speakers" to avoid loud/annoying beeps
  - Sample rate should be set to 48 kHz
  - Output should be set to
- 

Using the mixer:

- 37 main output channels are connected to the speakers by default (access via Dante ch. 1-37)
- 4 subwoofer output channels are connected to the speakers by default (access via Dante ch. 45-48)

[Audio Networking](#)

From:  
<https://wiki.zhdk.ch/IASpace/> - **immersive art space**

Permanent link:  
<https://wiki.zhdk.ch/IASpace/doku.php?id=audio&rev=1626446649>

Last update: **2021/07/16 16:44**

