

Audio

[under construction...]

Powering on the system:

1. Mixer
2. Computer
3. Speakers (via Siemens panel)

Audio output (from computer):

- Audio output should be set to Dante in Audio software
- NOTE: It's best to keep the system output set to "Internal Speakers" to avoid loud/annoying beeps
- Sample rate should be set to 48 kHz
- Output should be set to

Using the mixer:

- 37 main output channels are connected to the speakers by default (access via Dante ch. 1-37)
- 4 subwoofer output channels are connected to the speakers by default (access via Dante ch. 45-48)

Audio Networking

From:

<https://wiki.zhdk.ch/IASpace/> - **immersive art space**



Permanent link:

<https://wiki.zhdk.ch/IASpace/doku.php?id=audio&rev=1626446649>

Last update: **2021/07/16 16:44**