

# Audio

## [UNDER CONSTRUCTION...]

---

Powering on the system:

1. Mixer
  2. Computer
  3. Speakers (via Siemens panel)
  4. - adsf
  5. - gfsdgsdf
- 

Audio output (from computer):

- Audio output should be set to Dante in Audio software
  - NOTE: It's best to keep the system output set to "Internal Speakers" to avoid loud/annoying beeps
  - Sample rate should be set to 48 kHz
  - **IMPORTANT: the system often takes 5-10 minutes to establish the connection from the computer to ALL speakers..** This issue is duets the system having more that 32 total Dante devices (the limit of a single interface).
- 

Using the mixer:

- 37 main output channels are connected to the speakers by default (access via Dante ch. 1-37)
  - 4 subwoofer output channels are connected to the speakers by default (access via Dante ch. 45-48)
  - The master faders for the mains and subs are the two on the righthand side of the mixer.  
**PLEASE BE CAREFUL TO START WITH THE FADER AT  $-\infty$  AND SKOWKY RAISE THE VOLUME TO AN ACCEPTABLE LEVEL..** Typically levels between -10 and 0 are ideal.
- 

Troubleshooting: **I'm not getting any sound!**

1. Double-check that everything is powered on
2. **You may need to wait for up to 10 minutes for all the connections to be established** (although typically at least some of the speakers play right away after power up).

[Audio Networking](#)

From:

<https://wiki.zhdk.ch/IASpace/> - **immersive art space**

Permanent link:

<https://wiki.zhdk.ch/IASpace/doku.php?id=audio&rev=1626447429>

Last update: **2021/07/16 16:57**

