

Audio

[UNDER CONSTRUCTION...]

Powering on the system:

1. Mixer (power button is on the back right above the main Power cable)
 2. Computer (power is just below the pink Dante cat-7 cable)
 3. Speakers (via Siemens panel -> turn on all **odd numbered** outlets on the second spotlight page [add image(s)])
-

Audio output (from computer):

- Audio output should be set to Dante in Audio software
 - NOTE: It's best to keep the system output set to "Internal Speakers" to avoid loud/annoying beeps
 - Sample rate should be set to 48 kHz
 - **IMPORTANT: the system often takes 5-10 minutes to establish the connection from the computer to ALL speakers..** This issue is duets the system having more that 32 total Dante devices (the limit of a single interface).
-

Using the mixer:

- If it's not already loaded, be sure that **SCENE 101 HELLOWORLD210713** is loaded [update this, add picture(s)]
 - 37 main output channels are connected to the speakers by default (access via Dante ch. 1-37)
 - 4 subwoofer output channels are connected to the speakers by default (access via Dante ch. 45-48)
 - the omni ins are channels 49-56 (**the minijack input are channels 49-50**)
 - The master faders for the mains and subs are the two on the righthand side of the mixer. **PLEASE BE CAREFUL TO START WITH THE FADER AT $-\infty$ AND SLOWY RAISE THE VOLUME TO AN ACCEPTABLE LEVEL..** Typically levels between -10 and 0 are ideal.
 - all input faders should be set to 0 dB
 - output faders (in the output section (LS 01 - 30 + SUB 1 & 2) should be set to -20
-

Troubleshooting: **I'm not getting any sound!**

1. Double-check that everything is powered on
2. **You may need to wait for up to 10 minutes for all the connections to be established** (although typically at least some of the speakers play right away after power up).

[Audio Networking](#)

From:

<https://wiki.zhdk.ch/IASpace/> - **immersive art space**

Permanent link:

<https://wiki.zhdk.ch/IASpace/doku.php?id=audio&rev=1626448644>

Last update: **2021/07/16 17:17**

