
OptiTrack MoCap Cameras

Powering MoCap Cameras

To power up the OptiTrack MoCap system, follow this procedure:


- Navigate to the Home page on the touch panel in the back corner of the room

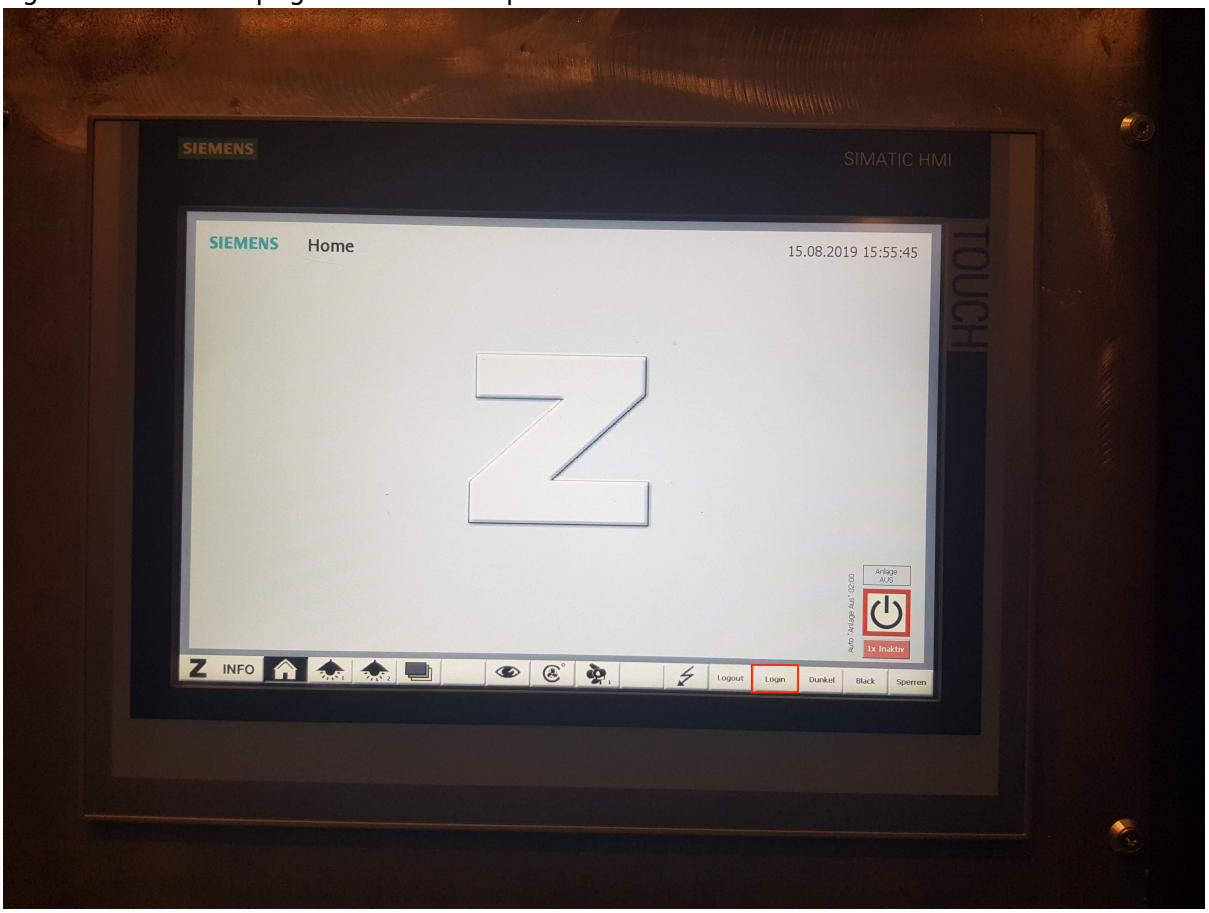


- Login as `Admin` (password can be found inside of key lockbox above the touch panel)




- Navigate to the AV page

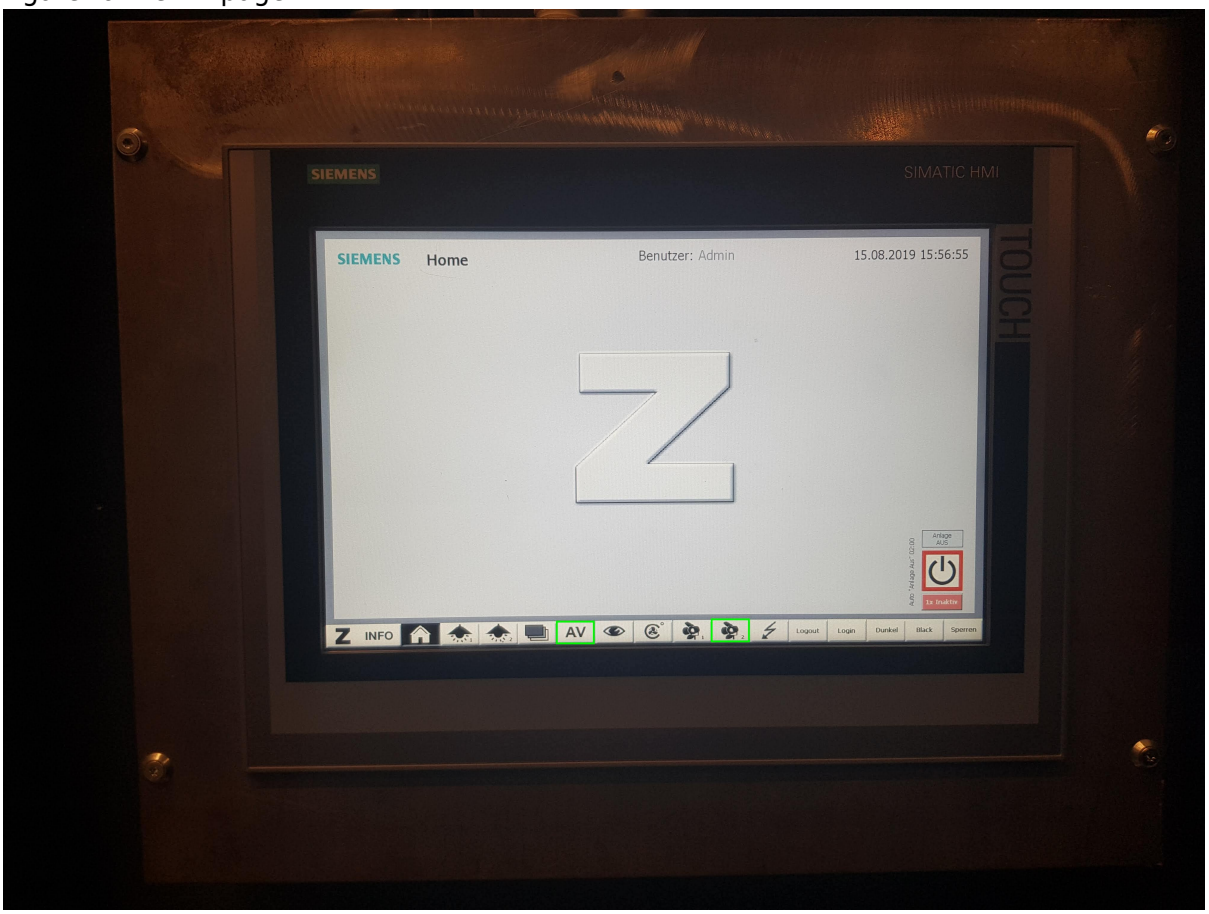


- Toggle the power controls `Nr. 13 -> Manuell -> I/O` & `Nr. 15 -> Manuell -> I/O` to the on (green) setting in the for WAK Galerien Gessneralle (Ost) section

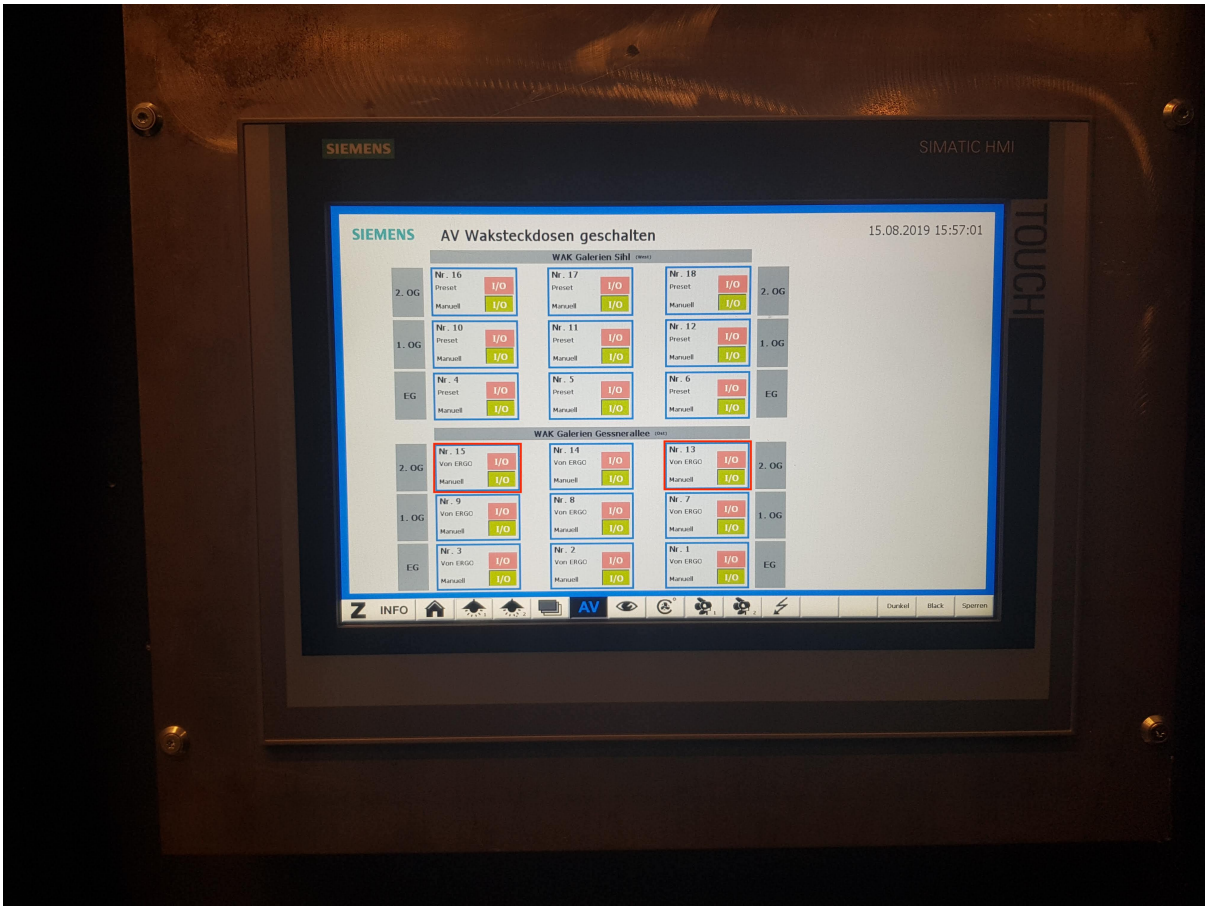


- After starting he OptiTrack software on the Alienware computer, the rings on the face of the cameras should light up. The rings will initially be green, they will turn blue once they are sufficiently calibrated

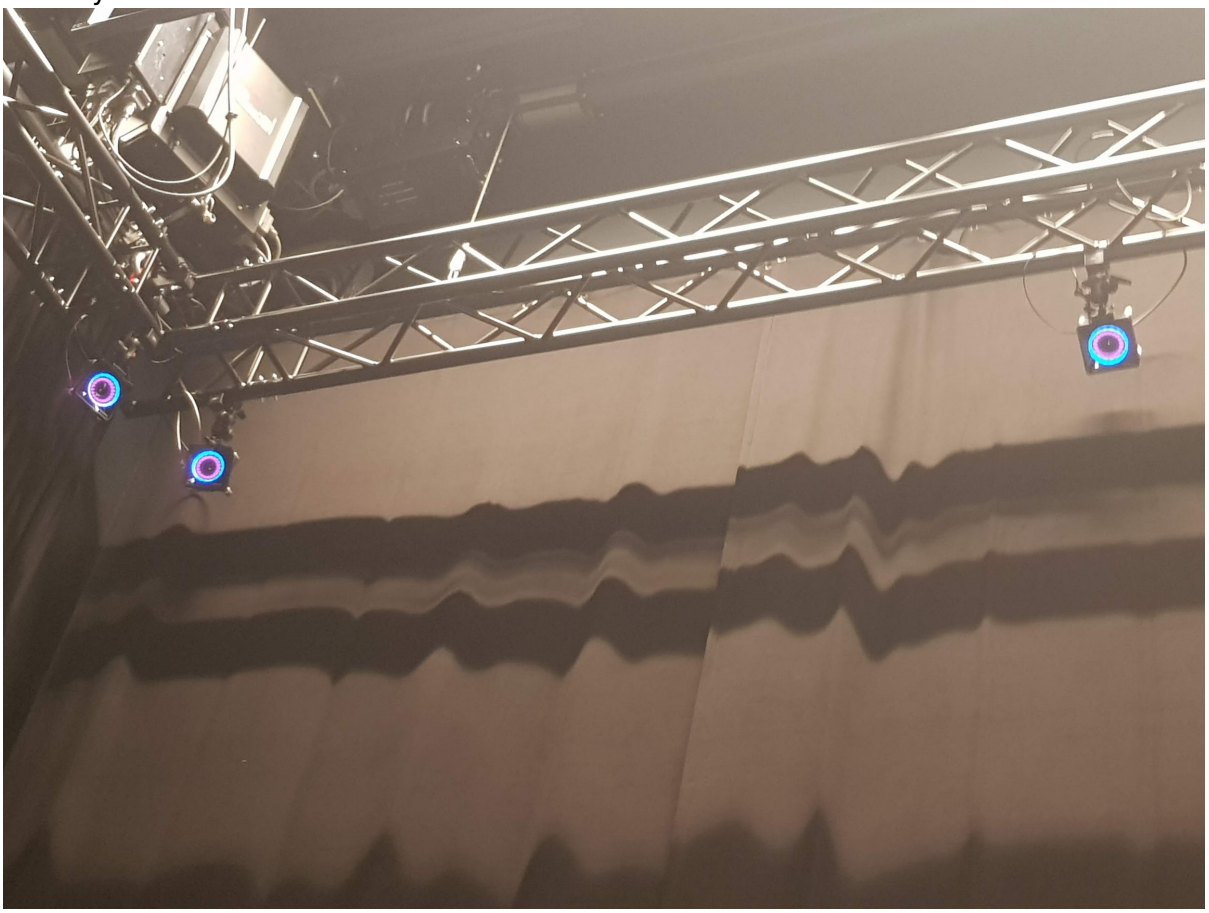

- When finished, be sure to turn `Nr. 13` & `Nr. 15` back to the off (red) setting

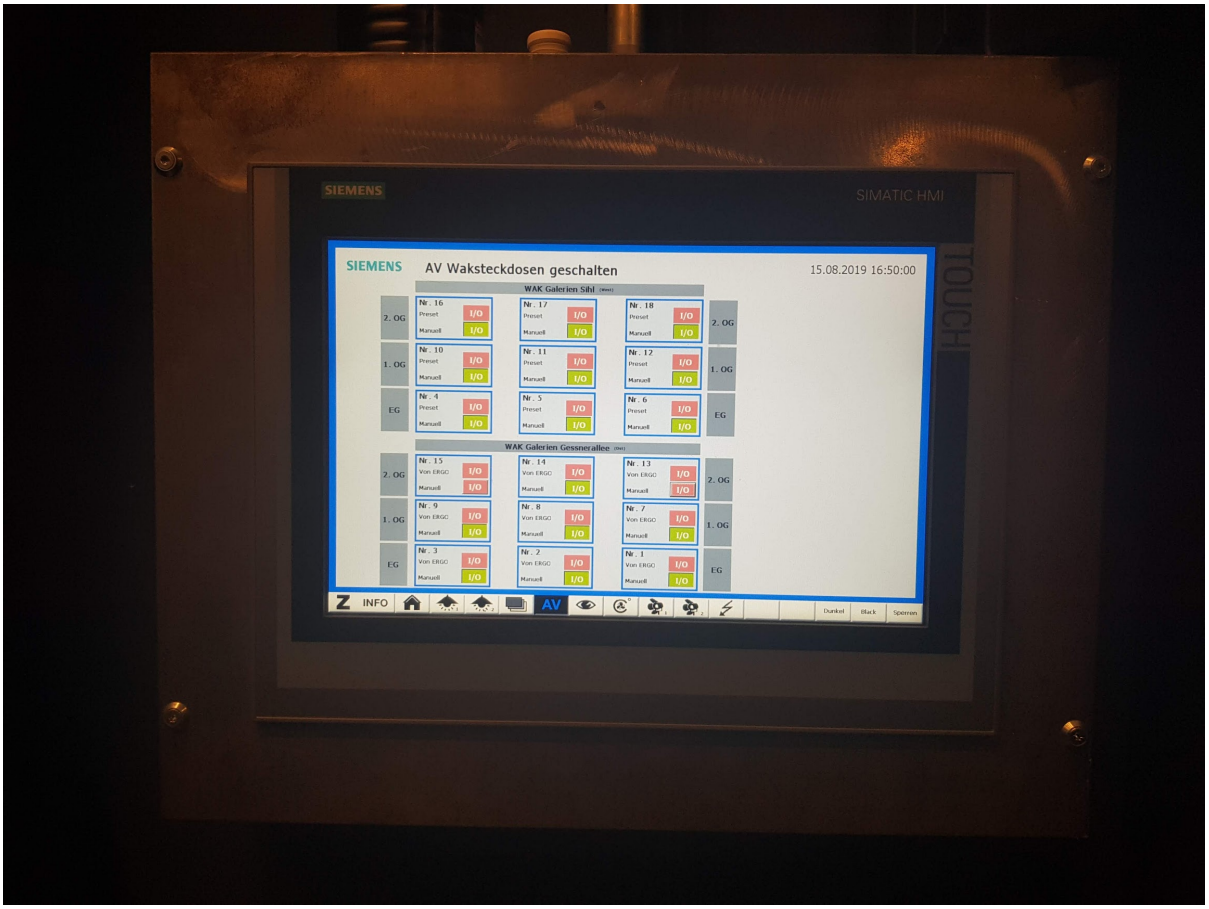

- Logout from the system (if it has not already automatically timed out)

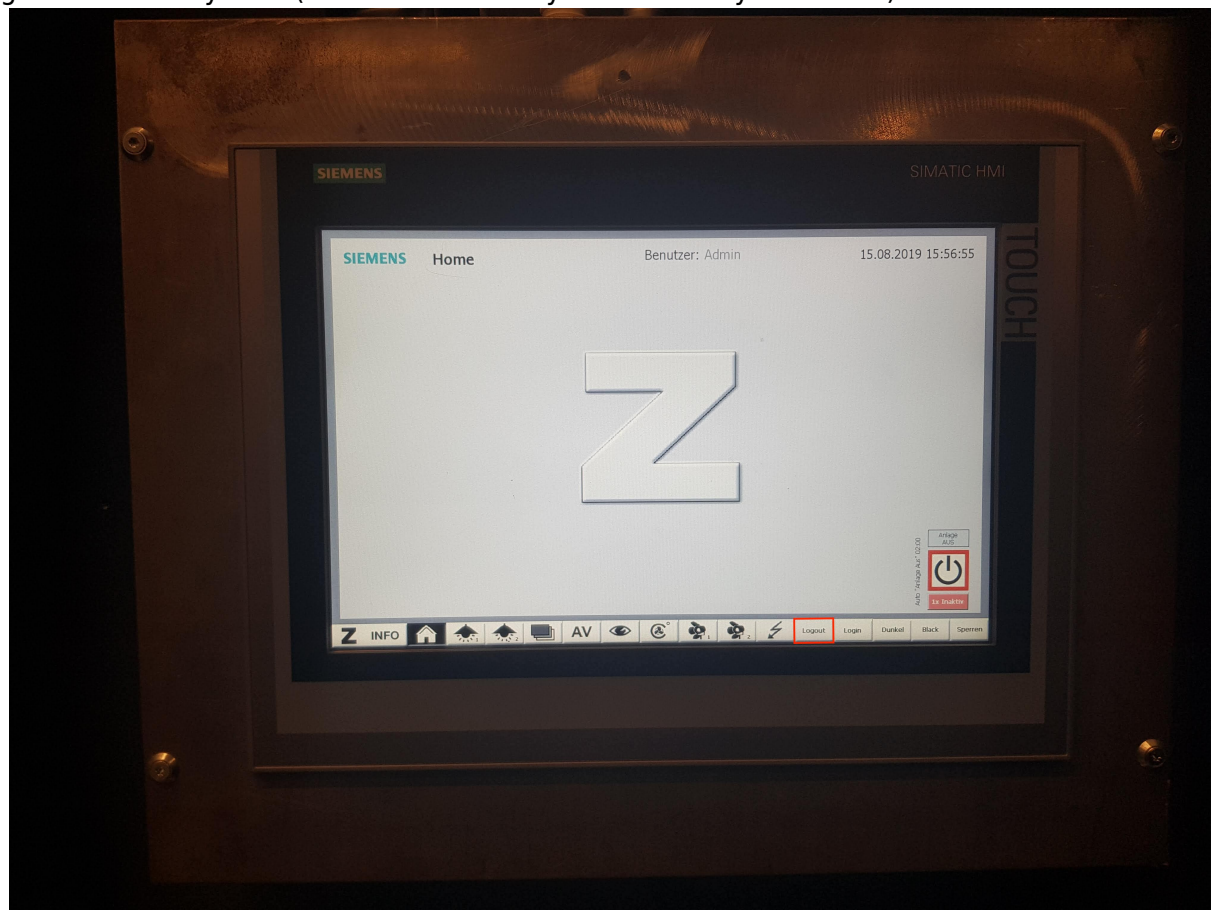

From:
https://wiki.zhdk.ch/IASpace/ - **immersive art space**

Permanent link:
https://wiki.zhdk.ch/IASpace/doku.php?id=optitrack_camera_system&rev=1565885880

Last update: **2019/08/15 18:18**