



# OptiTrack MoCap Cameras

To power up the OptiTrack MoCap system, follow this procedure:


- Navigate to the Home page on the touch panel in the back corner of the room

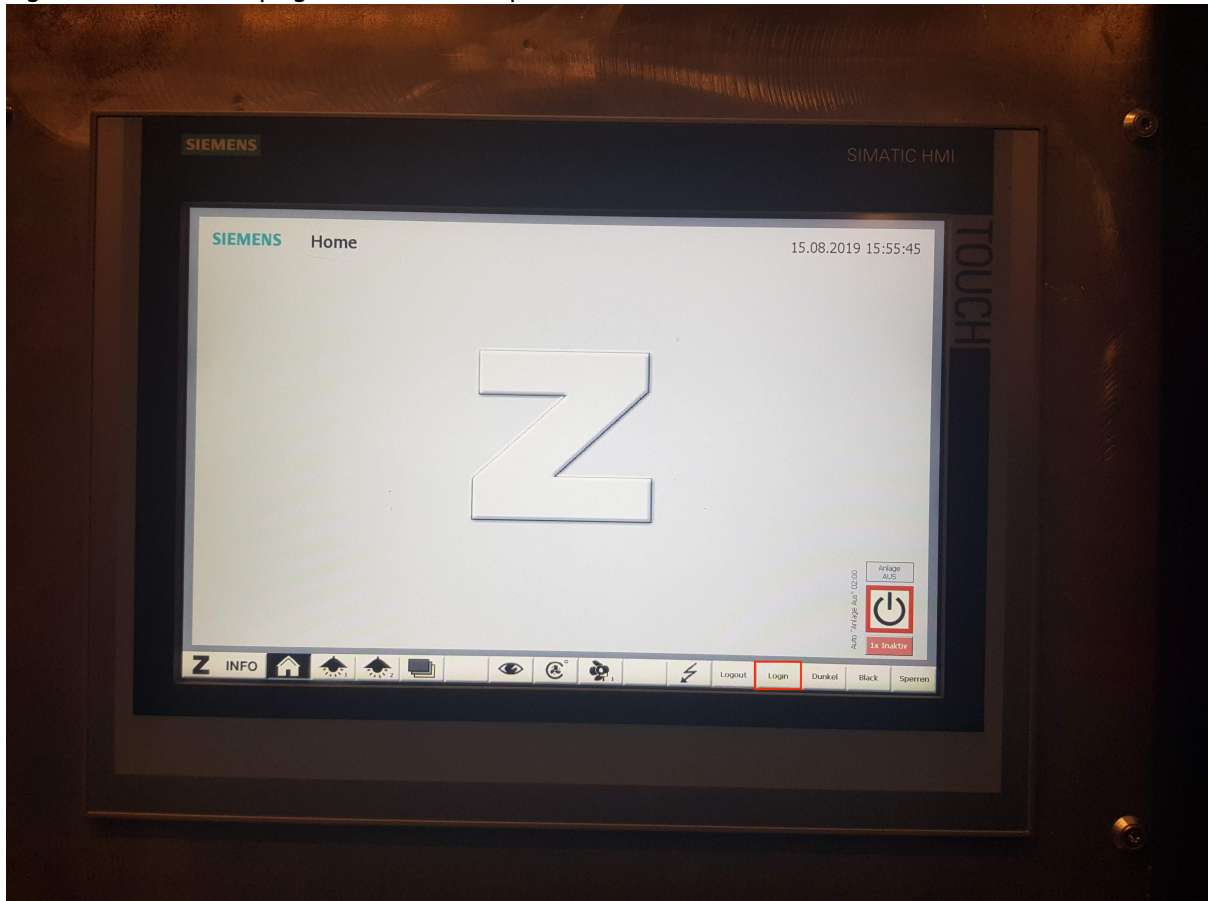

- Login as Admin (password can be found inside of key lockbox above the touch panel)

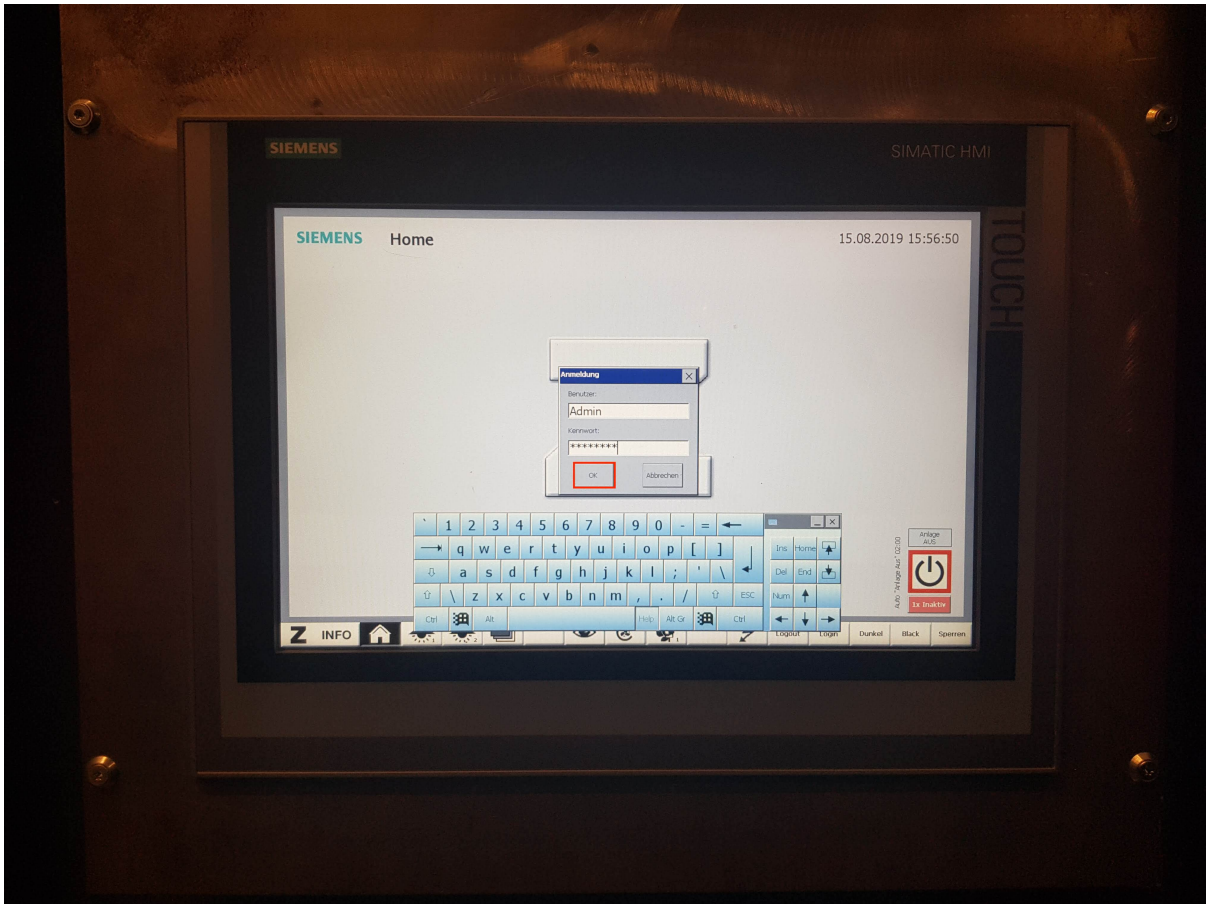


- Navigate to the AV page

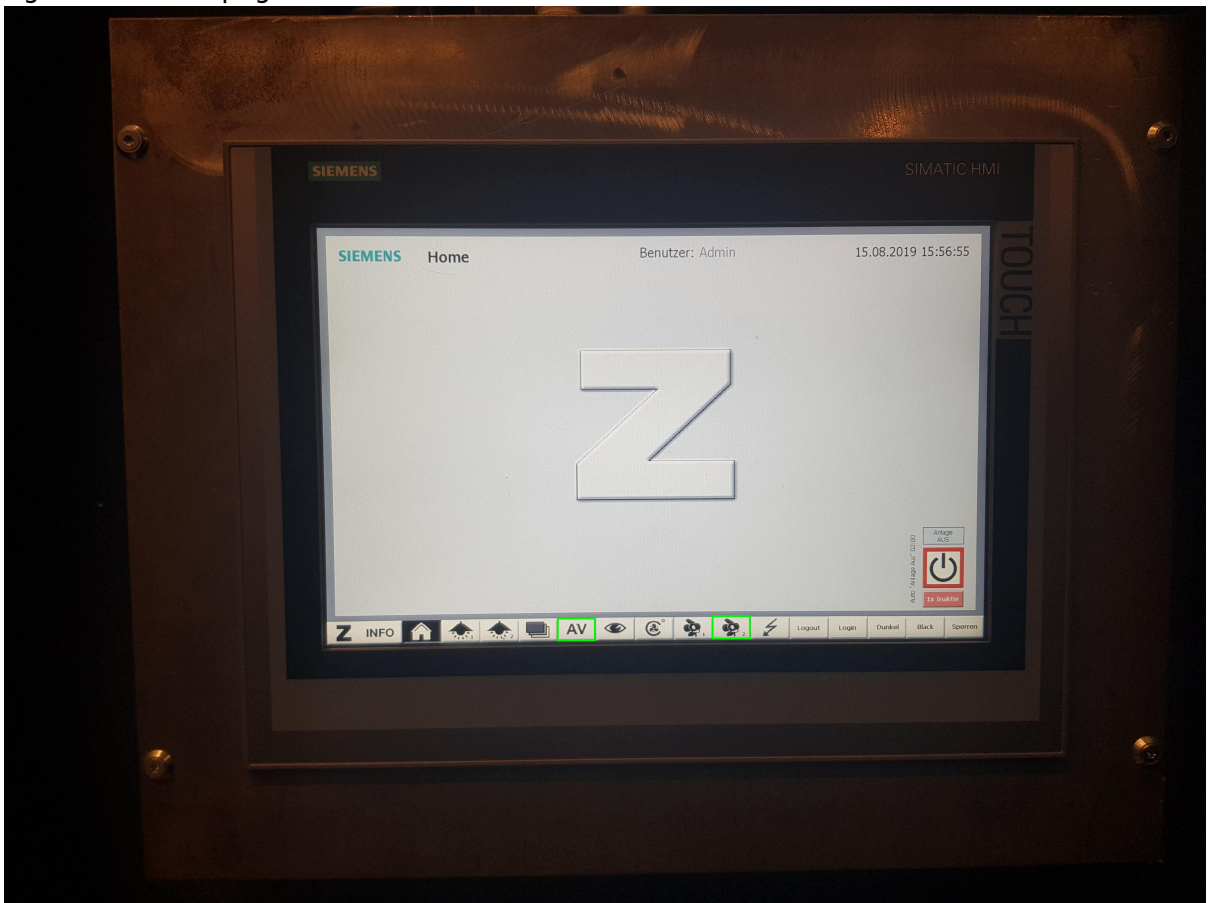


- Toggle the power controls Nr. 13 → Manuell → I/O & Nr. 15 → Manuell → I/O to the on (green) setting in the for WAK Galerien Gessneralle (Ost) section.
- After starting the OptiTrack software on the Alienware computer, the rings on the face of the

cameras should light up

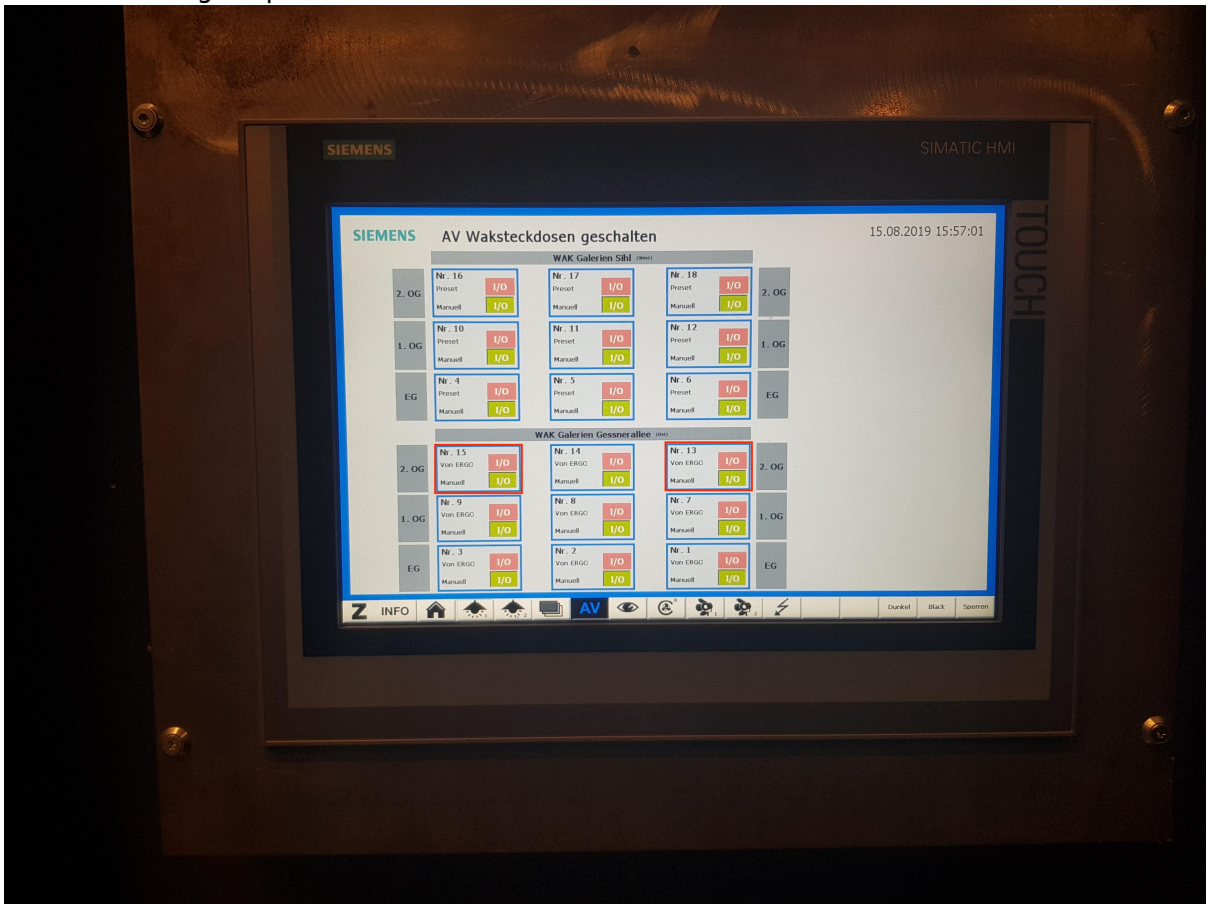

- When finished, be sure to turn Nr. 13 & Nr. 15 back to the off (red) setting
- Logout from the system (if it has not already automatically timed out)

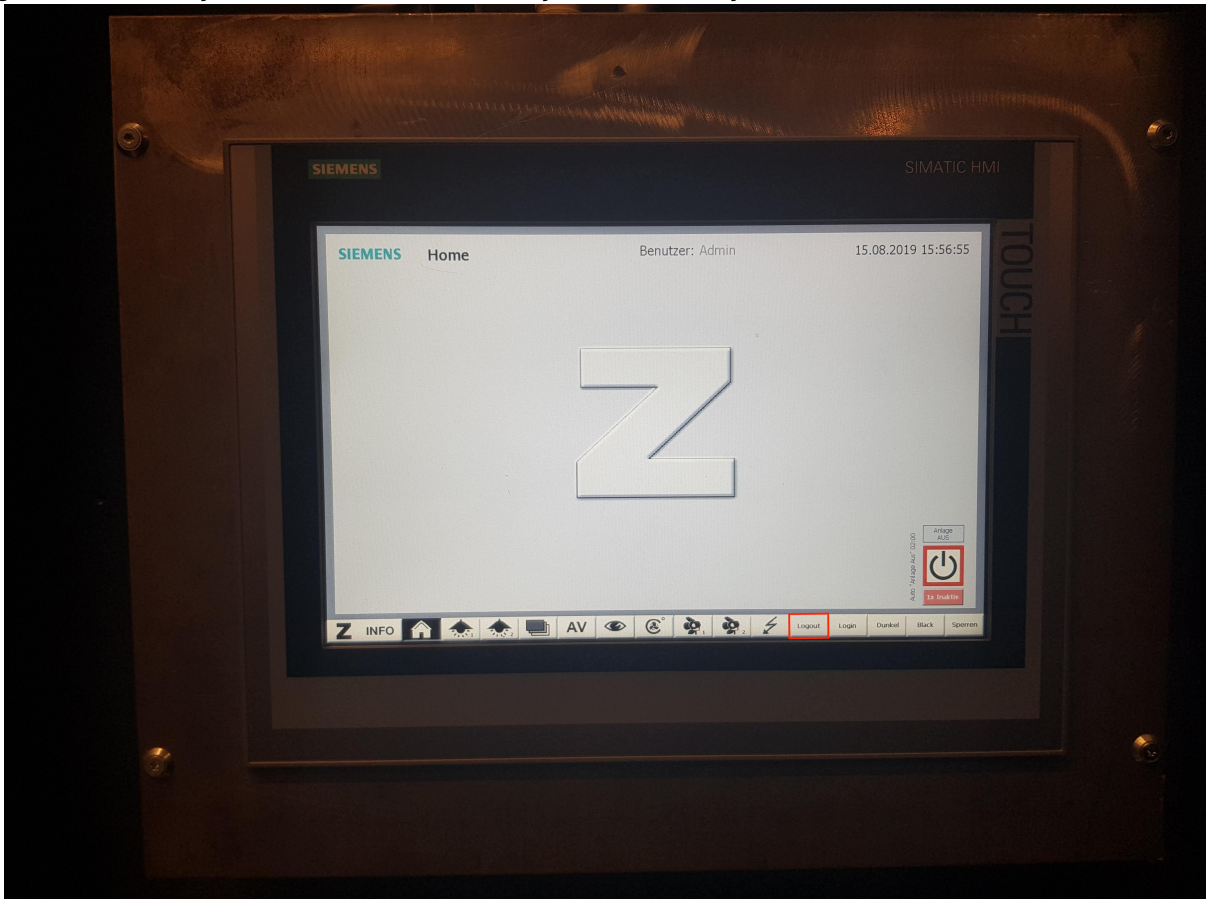

From:  
<https://wiki.zhdk.ch/IASpace/> - **immersive art space**

Permanent link:  
[https://wiki.zhdk.ch/IASpace/doku.php?id=optitrack\\_camera\\_system&rev=1565884033](https://wiki.zhdk.ch/IASpace/doku.php?id=optitrack_camera_system&rev=1565884033)

Last update: **2019/08/15 17:47**

